

Compatible with:



Warnings:

Carefully read all instructions and review the images before attaching.


Do not attach anything to the mount until after attaching the mount to the dashboard. Doing so makes it more difficult to attach the mount to the dash. **Please note:** If you screw into the mount it will be considered used and therefore non-refundable.

The ProClip mount and/or holder in the installation pictures may look slightly different from the one you have received. However, the same instructions apply. If you have questions call our customer service at **1-800-296-3212** or **+1-847-388-7171**.

ProClip USA, Inc. may not be held liable for any personal injury or damage to a vehicle or device, resulting from accident or improper use or installation, before, during or after the installation or removal of this mount and/or holder.



1. With the hex wrench (provided) unscrew and remove the two hex bolts. Then separate the two sections of the metal handlebar clamp.

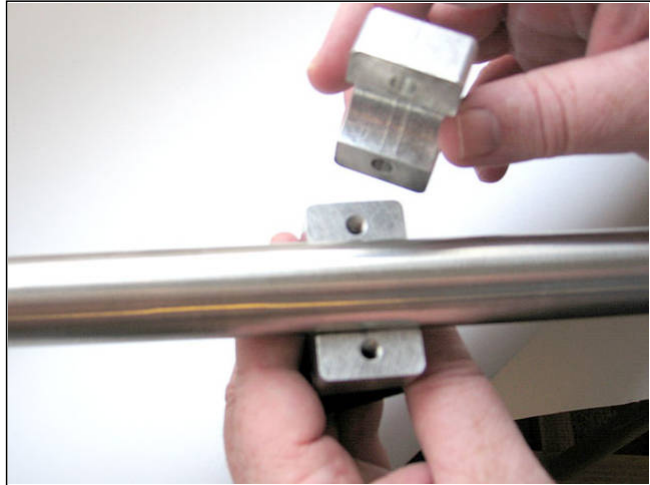

2. Place the two sections of the metal handlebar clamp into position around the handlebar.



3. Put the hex bolts back into place and tighten them with the hex wrench.



4. The Handlebar Mount is now in place. Loosen the center screw in the face plate and adjust it to desired angle/position. Then tighten the center screw firmly.