

Item No. 215199 - 2 Prong (Dual T) Adapter Plate with Tilt Swivel

ProClip®
Installation Instructions

Compatible with:

HP/Hewlett-Packard iPAQ 300 series
Magellan CrossoverGPS
Magellan Maestro 3100
Magellan Maestro 3140
Magellan Maestro 3200
Magellan Maestro 3210

Magellan Maestro 3220
Magellan Maestro 3225
Magellan Maestro 3250
Magellan Maestro 4000
Magellan Maestro 4040
Magellan Maestro 4050

Magellan Maestro 4200
Magellan Maestro 4210
Magellan Maestro 4220
Magellan Maestro 4250
Magellan Maestro 5310
Magellan Roadmate 1212



Warnings:

Carefully read all instructions and review the images before attaching.

Do not attach anything to the mount until after attaching the mount to the dashboard. Doing so makes it more difficult to attach the mount to the dash. **Please note:** If you screw into the mount it will be considered used and therefore non-refundable.

The ProClip mount and/or holder in the installation pictures may look slightly different from the one you have received. However, the same instructions apply. If you have questions call our customer service at **1-800-296-3212** or **+1-847-388-7171**.


ProClip USA, Inc. may not be held liable for any personal injury or damage to a vehicle or device, resulting from accident or improper use or installation, before, during or after the installation or removal of this mount and/or holder.



Unscrew the screw in the center of the mounting plate and remove the mounting plate from the Tilt Swivel base plate.



Place the Tilt Swivel base plate over the matching holes in your mounting bracket (demo ProClip mount shown in picture) Attach the base plate by using the applicable screws enclosed

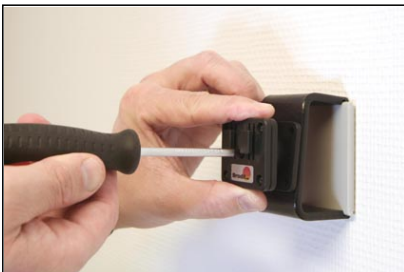

Place the mounting plate onto the Tilt Swivel base plate and attach it with the center screw. This screw also controls the pivot, tighter for a firm hold and loose for more (easier) movement/angling of the mounting plate.



Now that the plate is in place, find your device cradle, which is usually enclosed with your device when purchased. (Magellan 2000 shown in picture). Attach your device cradle to your device, then hook the device with the cradle onto the T prongs and slide it down. If you don't have a cradle, hook your device onto the T prongs and slide it down. To remove it, slide the device up and unhook it from the T prongs.