


Compatible with:

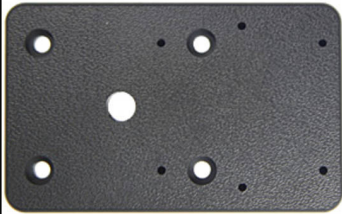

Warnings:

Carefully read all instructions and review the images before attaching.

The ProClip extension plate in the installation pictures may look slightly different from the one you have received. However, the same instructions apply. If you have questions call our customer service at **1-800-296-3212** or **+1-847-388-7171**.

ProClip USA, Inc. may not be held liable for any personal injury or damage to a vehicle or device, resulting from accident or improper use or installation, before, during or after the installation or removal of this extension plate.



1. Attaching the extension plate:
Press a screwdriver (Philips) firmly through the pre-drilled holes in the extension plate to open them up. Place the extension plate over the matching holes in your mounting bracket. Attach the extension plate by using the self-tapping screws. Note: The machine screws with nuts are for mounts made of metal with large holes.



2. Attaching a holder to the extension plate:
Attach the base plate from the holders tilt swivel to the extension plate with the enclosed screws in the holder packaging. (TomTom Holder with tilt swivel shown in pictures)



3. Attaching a holder to the extension plate:
Attach your holder onto the extension plate. (see separate instruction enclosed with the holder)



4. The extension plate with holder and device in place. The device shown in the picture is a TomTom XL navigation unit.