

Item No. 654046 - ProClip Angled Mount



PROCLIP[®]
Installation Instructions

Compatible with:

Mini Cooper 2007 - 2010 (ALLR)




Warnings:

Carefully read all instructions and review the images before attaching.

Do not attach anything to the mount until after attaching the mount to the dashboard. Doing so makes it more difficult to attach the mount to the dash. **Please note:** If you screw into the mount it will be considered used and therefore non-refundable.

The ProClip mount and/or holder in the installation pictures may look slightly different from the one you have received. However, the same instructions apply. If you have questions call our customer service at **1-800-296-3212** or **+1-847-388-7171**.


ProClip USA, Inc. may not be held liable for any personal injury or damage to a vehicle or device, resulting from accident or improper use or installation, before, during or after the installation or removal of this mount and/or holder.

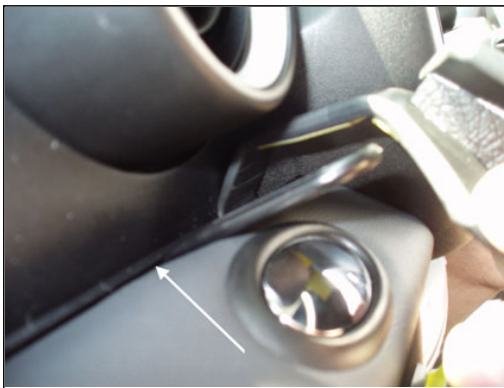

Open the top compartment next to the left air vent. Press the thin end of the enclosed gap opener into the gap between the dashboard ledge and the panel frame below the air vent, to widen it. (See arrow in image). Peel off the cover of adhesive tape on the ProClip. Press the curved edge on the upper part of the ProClip into the gap next to the gap opener. Press until you see or hear/feel it snaps into place.



Slide the ProClip all the way to the right. Open the glove compartment.

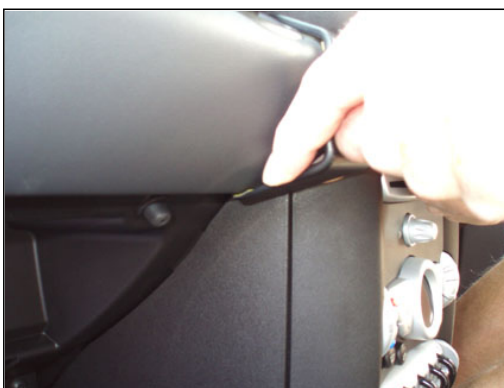

Press firmly forward on the lower part of the ProClip so the angled edge hooks around the dashboard edge by the glove compartment. Close the glove compartment and the top compartment. Pull out the gap opener. The ProClip is in now place as shown in the overview picture above.