

Item No. 844744 - Holder with Tilt Swivel for Cable Attachment

Compatible with:
OQO 2



Warnings:

Carefully read all instructions and review the images before attaching.


Do not attach anything to the mount until after attaching the mount to the dashboard. Doing so makes it more difficult to attach the mount to the dash. **Please note:** If you screw into the mount it will be considered used and therefore non-refundable.

The ProClip mount and/or holder in the installation pictures may look slightly different from the one you have received. However, the same instructions apply. If you have questions call our customer service at **1-800-296-3212** or **+1-847-388-7171**.

ProClip USA, Inc. may not be held liable for any personal injury or damage to a vehicle or device, resulting from accident or improper use or installation, before, during or after the installation or removal of this mount and/or holder.



1. 1. Installation of cable: Place the holder with the backside downwards. Place the connector into the lower part of the holder. The marks pointing upwards, so you can see them when placing the connector into the holder. Place the enclosed front piece over the connector. Press the lower part of the holder and the front piece together so the cable is locked into place. Flip the holder over so the backside is upwards.

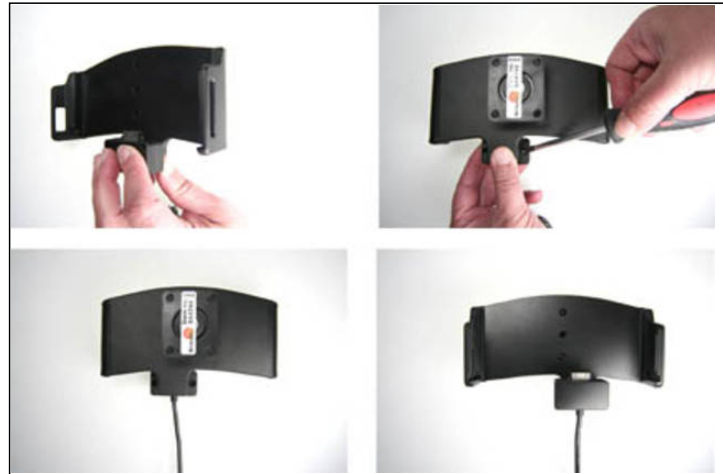

2. 2. Screw the front piece into place with the enclosed screws. The cable is in place.



3. 3. Installation of holder: Loosen the screw in the center of the holder so you can remove the tilt swivel attaching plate on the back. Place the attaching plate on desired position. Screw the attaching plate into place with the enclosed screws. Place the holder over the attaching plate so the tilt swivel fits. Screw the holder onto the attaching plate.



4. 4. The holder is in place.